

ASSEMBLY AND INSTRUCTION MANUAL

MODEL 0221 WUMMS!

© 2021 KURT BEIER & KATI QUINGER



Type 62T

Type 61T



Type 258

Type 61TF



Big sofa on a covered plateau



Optionally with motorised
seat adjustment




Luxurious with high quality
spring core



Loosely inserted seat cushions

Mounting of connectors

1. Position the elements at the place supposed to stay.

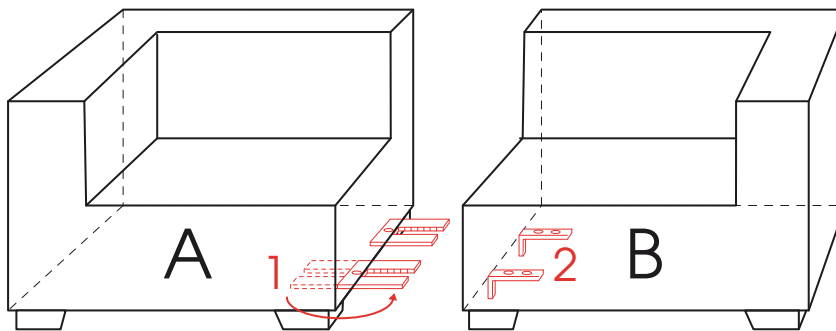


2. Turn connector ratchet 1 of element A to the outside.


3. Firmly push together part A and B, until metal guides 2 catch into guides 1.

4. In case of dismounting lift part B with the metal guides 2 and pull away.


FUNKI - how it works:

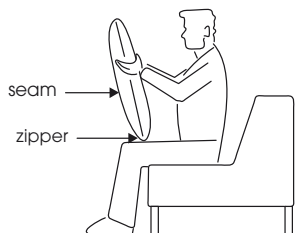


1. Take the cushion at its upper side and put the cushion on your knees with the zipper on the bottom. The seamless side faces you.

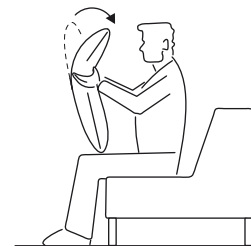

2. Move the upper part of the cushion towards yourself until the final position is reached.

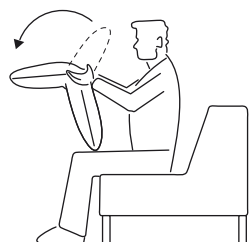

3. Now you are able to move the upper part backwards until the upper part of the cushion will click into place in the zero position.

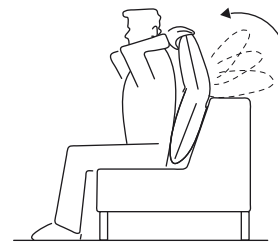


4. Now put the cushion in the preferred position (e.g. in the back, seamless side in front and zipper at the bottom). By pulling the upper part of the cushion towards yourself, you are now able to choose among 16 raster positions, however you like it.

Use of motorised seat adjustment:

1. Insert the plug A into the charging socket at the bottom of the sofa and then the transformer into the socket.
2. By pressing the switch buttons B and C at remote control, the seat can be moved continuously to the required position.

 Charging socket




The charging socket is always located on the back of the connector side.

Power supply

TRANSFORMER

Attention!
Transformer has to be situated outside of the sofa!

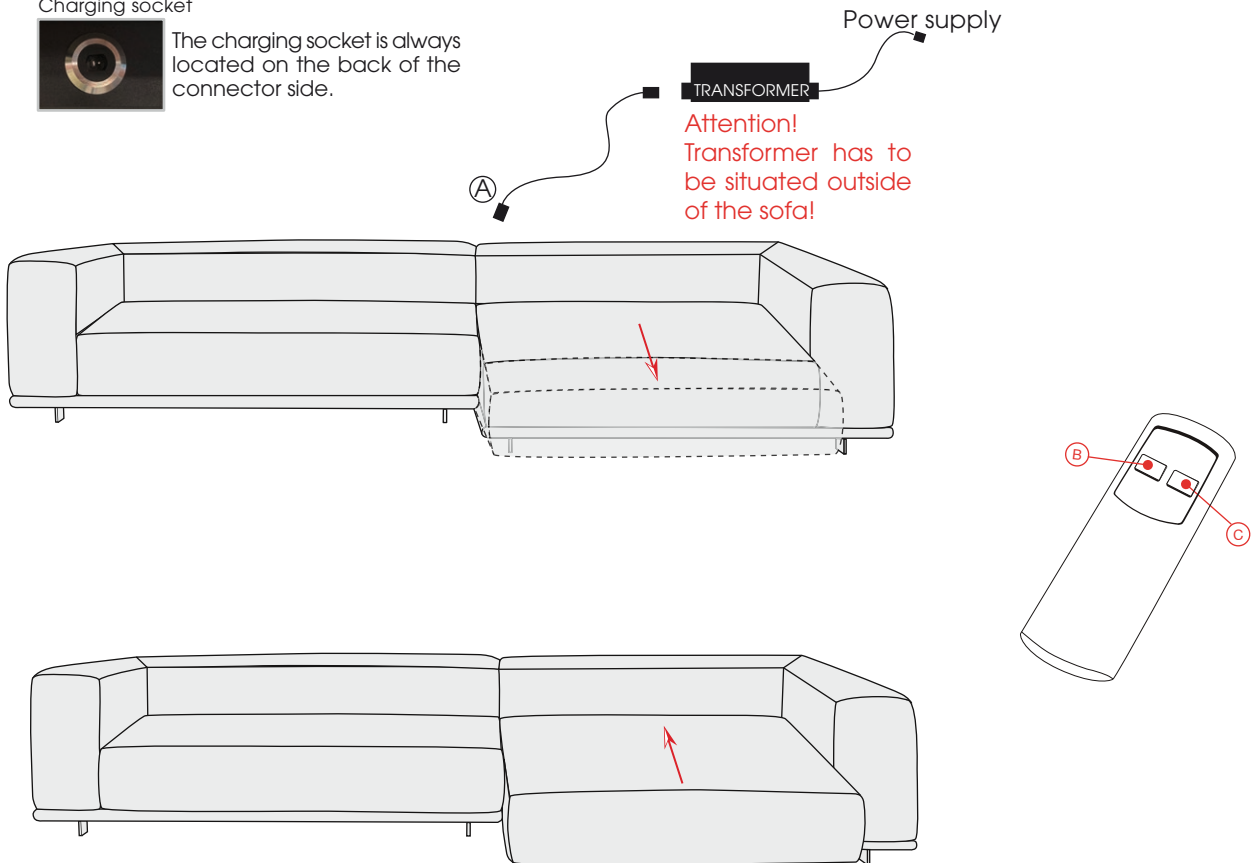

Motorised seat adjustment - Programming of transmitter and receiver

Delivery condition: already synchronised

November 2021

Brief instruction, Pairing-Method:

Should a new start-up of remote control be necessary the wireless communication with the control/motor must be established. Proceed as follows:



1. Press pairing buttons A at receiver 2 x until the LED indicates. The pairing process is active for about 10 seconds.

2. Press simultaneous button B and C at the transmitter until the green LED at the receiver vanishes. This confirms a successful pairing process.

Note: For the pairing process the distance between transmitter and receiver should be less than 2 metres.

The programming is completed, the transmitter is now ready for operation. If the motor doesn't start while pressing, release the button and press again. If necessary retry the process.

The programming is completed, the transmitter is now ready for operation. If the motor doesn't start while pressing, release the button and press again. If necessary retry the process.



Put drive systems into operation successively, **don't** operate several systems simultaneous. Otherwise the remote control cannot be assigned clearly by control/motor.